




01823 323363
 info@robertsaudiosolutions.co.uk,
 www.robertsaudiosolutions.co.uk

Rebroadcasting from Frontrow Pro Digital to Roger Touch

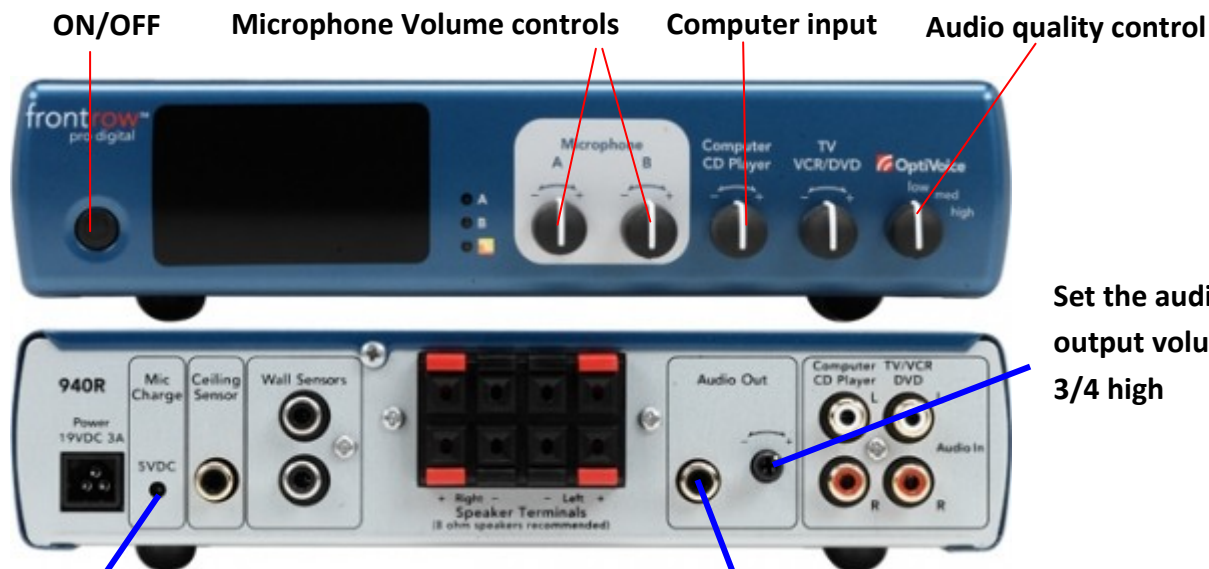

Set the audio output volume to 3/4 high

Teachers Microphone



Mute Button

Charger Cable

Indicator:

Solid Green = Microphone Active

Flashing Green = Microphone Muted

Flashing Red = Battery low

ON/OFF Button

Cable for Radio Aid

Roger Touch



Audio Input socket